


HD Preamp with DSP-45

24 BIT Preamp

Rev. C Basic Mode

08/10/2011

Page 1 of 3

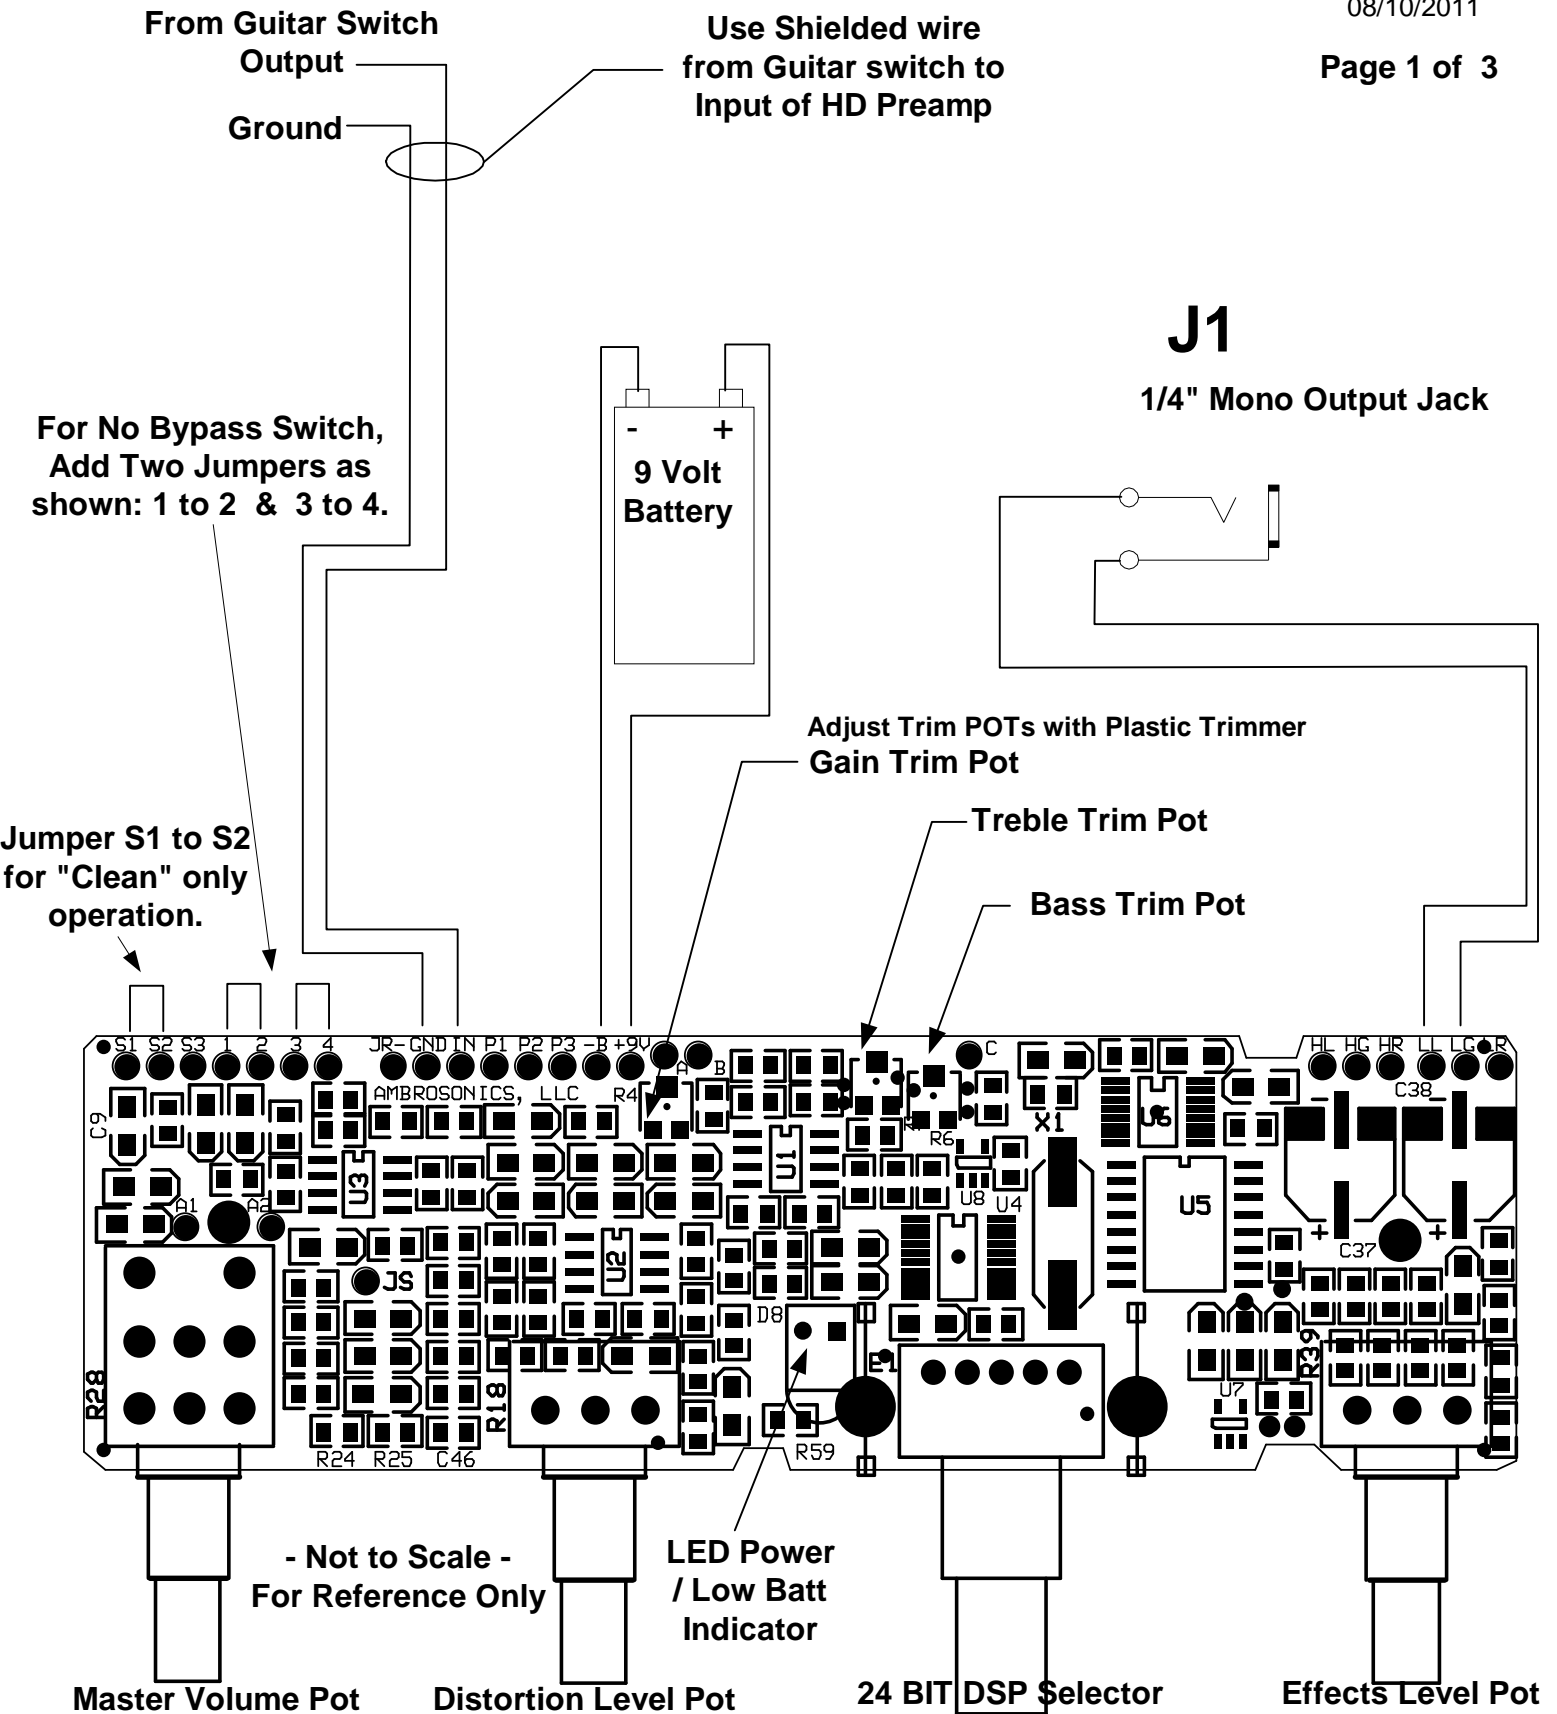

DSP-45 24 BIT Preamp


Rev. C Wiring Instructions

No Bypass Switch

Note: For instruments requiring NO DISTORTION, jumper wire hole S1 to S2 on PC Board. Don't install the SW1 switch!

08/10/2011

Page 2 of 3

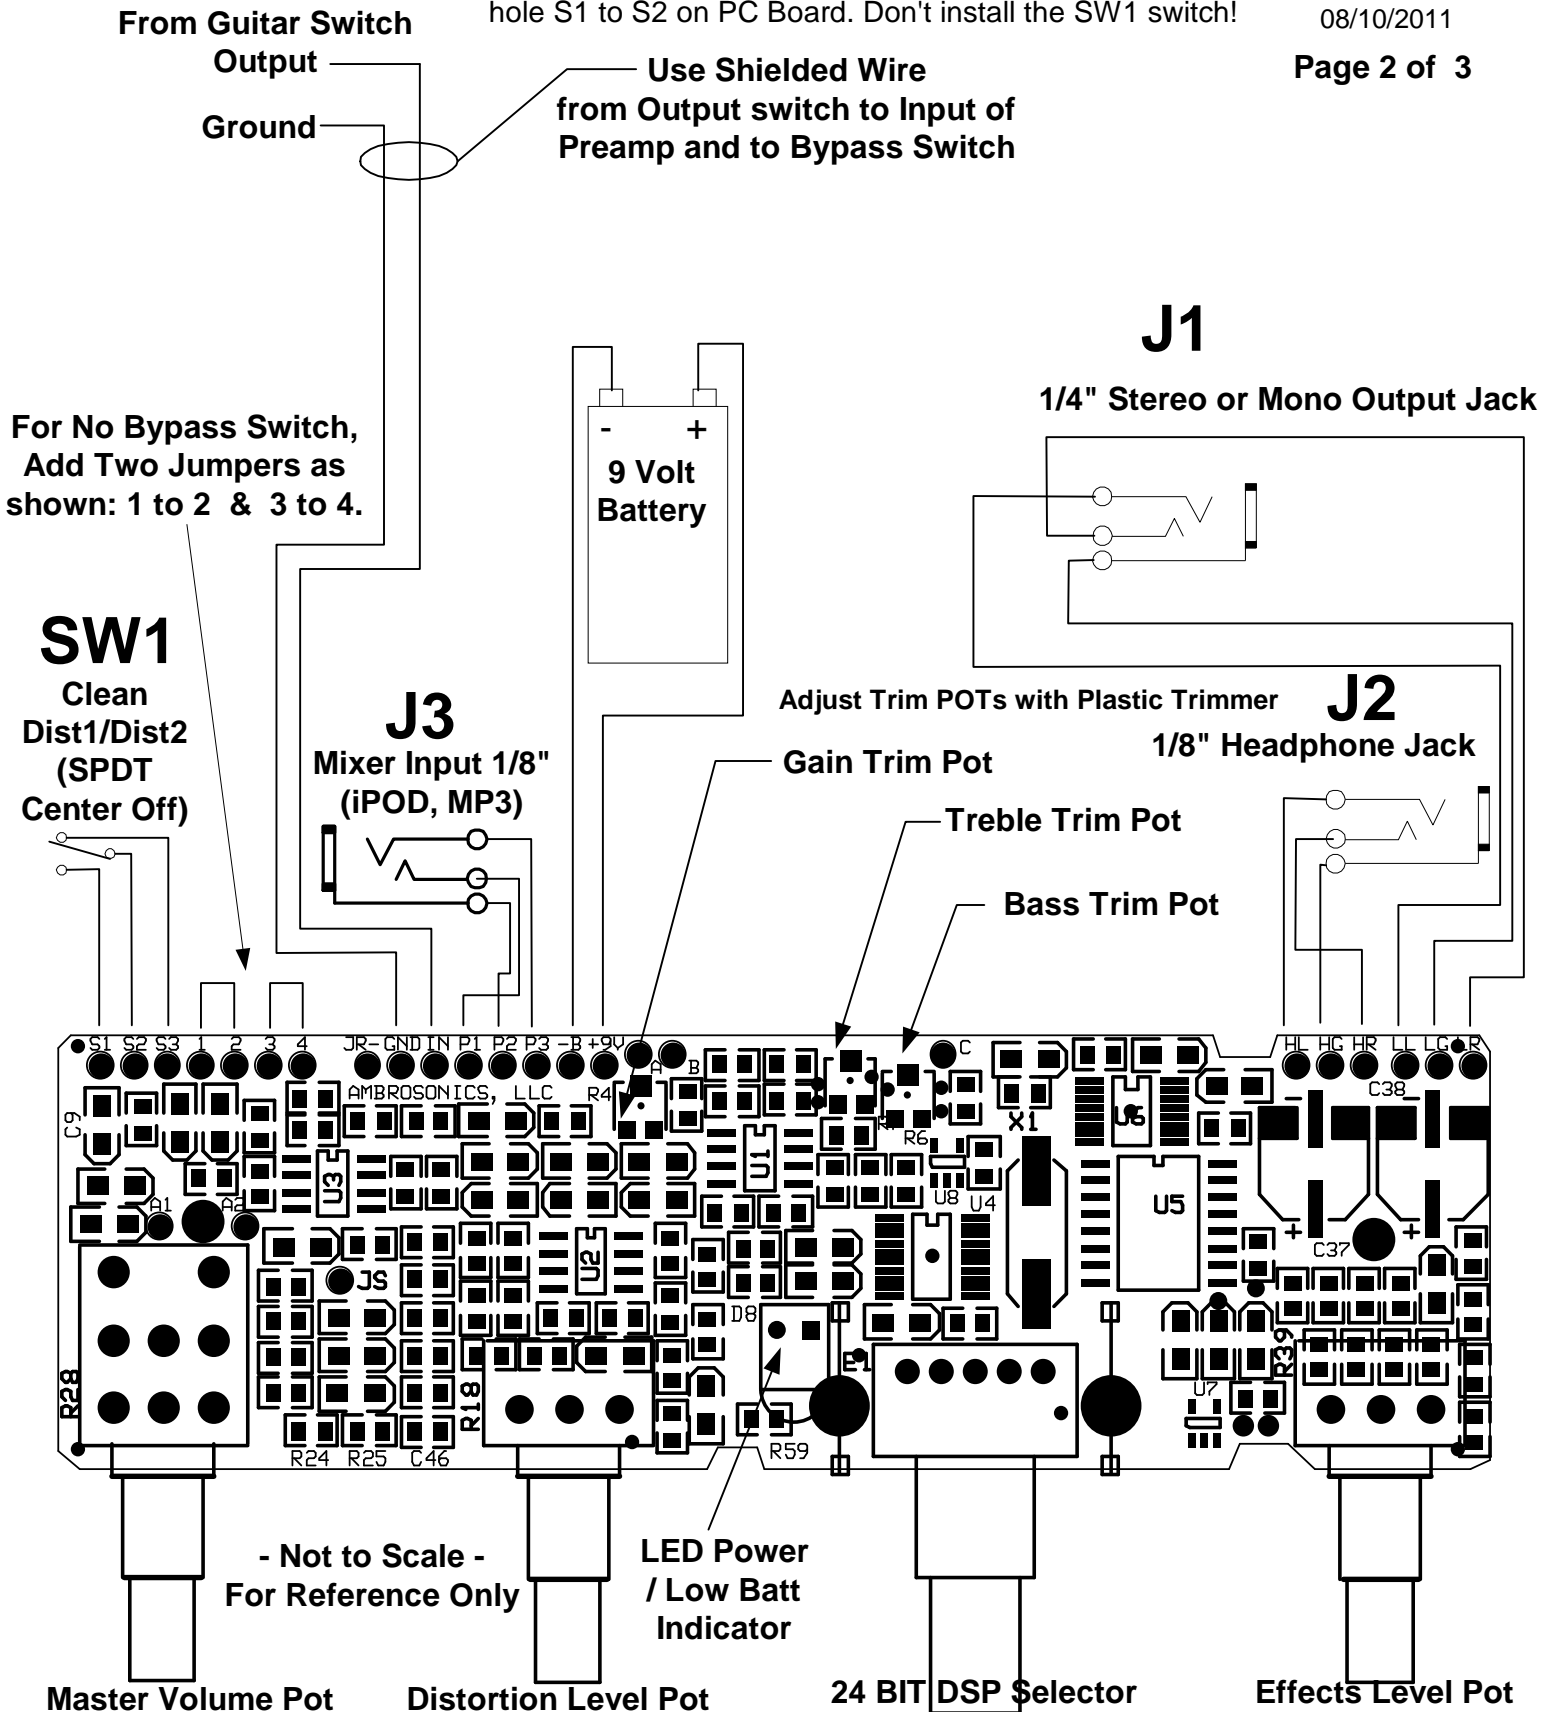

For No Bypass Switch, Add Two Jumpers as shown: 1 to 2 & 3 to 4.

SW1
 Clean Dist1/Dist2 (SPDT Center Off)

J3
 Mixer Input 1/8" (iPOD, MP3)

Use Shielded Wire from Output switch to Input of Preamp and to Bypass Switch

J1
 1/4" Stereo or Mono Output Jack

Adjust Trim POTs with Plastic Trimmer
J2
 1/8" Headphone Jack

Gain Trim Pot
 Treble Trim Pot
 Bass Trim Pot

- Not to Scale -
 For Reference Only

LED Power / Low Batt Indicator

Master Volume Pot Distortion Level Pot 24 BIT DSP Selector Effects Level Pot

DSP-45 24 BIT Preamp

Rev. C Wiring Instructions

All Options

Note: For instruments requiring NO DISTORTION, jumper wire hole S1 to S2 on PC Board. Don't install the SW1 switch!

08/10/2011

Page 3 of 3

